



STORZ GASKET REPLACEMENT KIT

(A4215-KIT, A4216-KIT, A4220-KIT, A4221-KIT)

INSTALLATION INSTRUCTION

CONTENTS

1 Storz Gasket


1 Tube P-80 Assembly Lubricant®



Failure to use the provided P-80 Assembly Lubricant can result in the gasket becoming dislodged resulting in the inability to properly seal couplers as expected. Always use P-80 Assembly Lubricant provided in this service kit.

To replace the Storz gasket:

1. Remove the old gasket.
2. Ensure that the gasket groove is free of debris.
3. Apply P-80 Assembly Lube to the inner and outer sides of the gasket as shown.
4. Firmly press the gasket into the groove in the coupling. Assure that the gasket is fully seated.
5. Allow 2 hours drying time for the P-80 Assembly Lubricant.

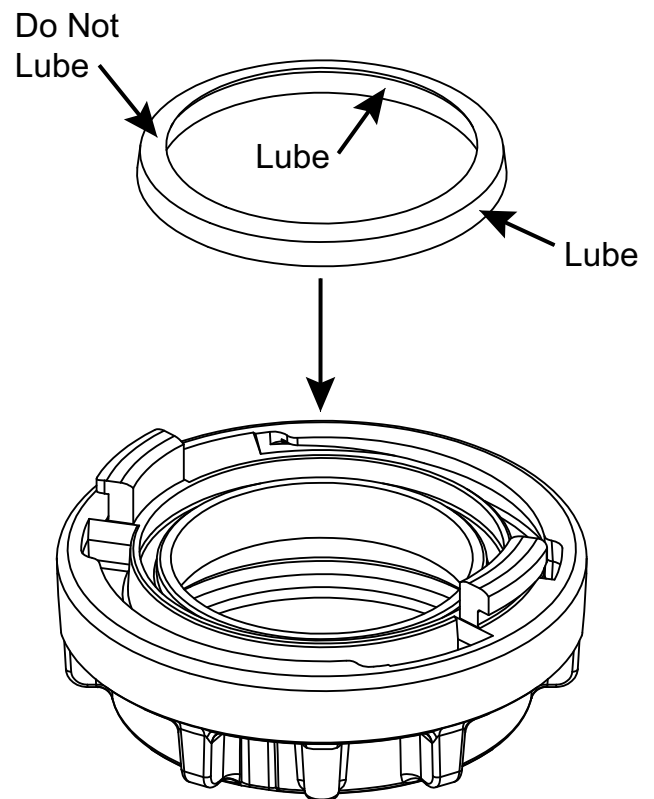

TASK FORCE TIPS LLC
MADE IN USA · tft.com

3701 Innovation Way, Valparaiso, IN 46383-9327 USA
800-348-2686 · 219-462-6161 · Fax 219-464-7155