

Product Bulletin

5-Way Manifold New Safety Warnings


The TFT Service and Support team recently observed a 5-Way Manifold returned from a customer in which the LDH shutoff valve was not fully closed following use. Please heed the following warnings and affix the enclosed safety label to the location shown below. Also, read the revised literature **LIA-535 5-Way Manifold Instruction for Installation, Operation and Maintenance (Revision 06)**, which is available at tft.com/serial-number.

⚠ WARNING

Initiation of water flow to this appliance while any valve is open can cause the appliance to become unstable or out of control, resulting in serious injury or death. To avoid an out of control appliance, visually verify all valves are in the closed position by looking into all outlets before connecting hose and flowing water.

⚠ WARNING

Do not use the 5-Way manifold if a gap is visible between the sliding plug and valve seat as viewed from the LDH outlet. A gap indicates a malfunction that will require repair or replacement.

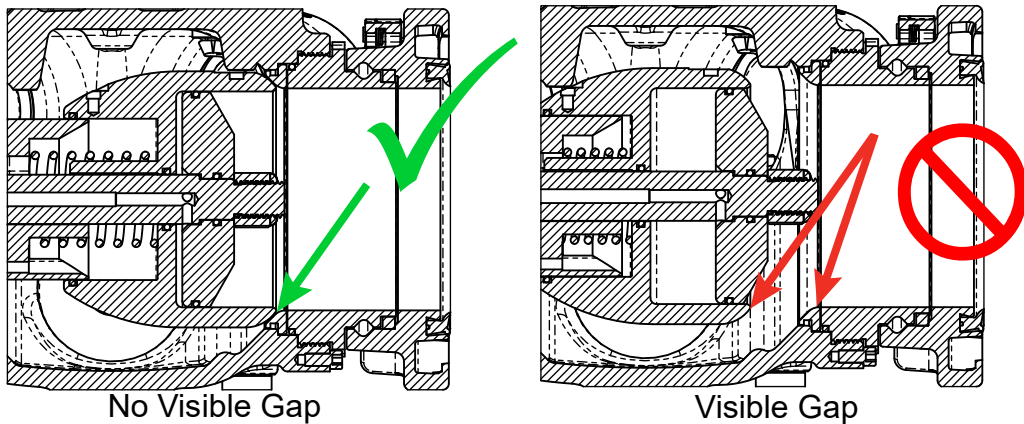

Location of the new WARNING label

